


# Air Water & Ice LLC

 
## How to use Push In Fittings

### Cut tube square

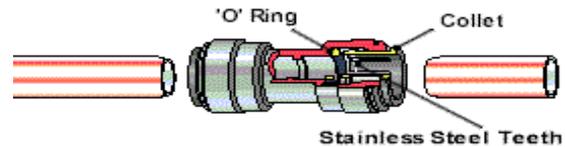


Cut the tube square. It is essential that the outside diameter be free of score marks and that burrs and sharp edges be removed before inserting into fitting.

### Insert tube




Fittings grips before it seals. Make sur tube is pushed in the tube stop

### Push up to tube stop

 

Push the tube into the fitting, to the tube stop. The collet (gripper) has stainless steel teeth which hold the tube firmly in position while the 'O' ring provides a permanent leak proof seal.

### Pull to check secure

 


Pull on the tube to check it is secure. It is a good practice to test the system prior to considering your handy work is done. The system doesn't full pressurize until the tank is full.

### Disconnecting

 *Air, Water & Ice*

### Push in Collet and remove tube



To disconnect, ensure the system is depressurized before removing fitting. Push in collet squarely against face of fitting. With the Collet held in this position, the tube can be removed. The fitting can then be re-used.

**\*Remove Blue Clip before removing tubing**